


www.MLMEBLE.pl

GB DE CZ SK RU LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU


OLIWIER 09
195 166 41

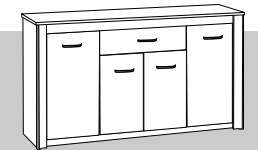

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксесуары / furnitūra :

| | | | | | | | | | | |
|-----------------|-------------------|--------------|-------------------|---------------|------------------|--|--|-------------------|----------------|-----------------|
| x 22 KK 8/32 | x 18 KT 6,3/50 | x 10 ZA N | x 80 GZ 1,4/25 | x 8 SG 8/8 | x 18 MD | x 18 ZAM | x 12 PA Ø5 | x 40 WT 3,5x16 | x 2 WT 4x30 | x 10 WT 4x27 |
| x 4 WT 3x10 | x 4 ZA 110° | x 4 ZPR | x 4 PK H-0 | x 4 PK H-4 | x 8 WE 6,3x30 | x 8 WE 6,3x13 | x 10 BDR | x 1 PA L350 | x 2 KT 50 | x 1 WS L350 |
| x 4 DPP 03 | x 2 ZPL | x 2 ZPP | x 5 UTO | x 1 PK 25 | x 3 LT | x 1 klej / glue / kleber / lepidlo / lepidlo / klen / kijai | x 1 kluczyk / key / schlüssel / klíč / klúč / ключ / raktas | | | |

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

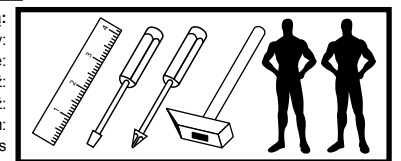

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

