

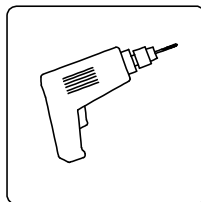
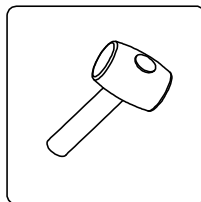
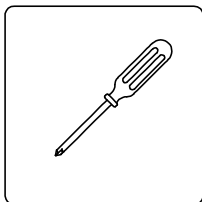




UPUTSTVO ZA MONTIRANJE
ASSEMBLING INSTRUCTION

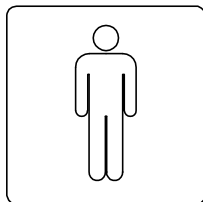

Krevet Fokus

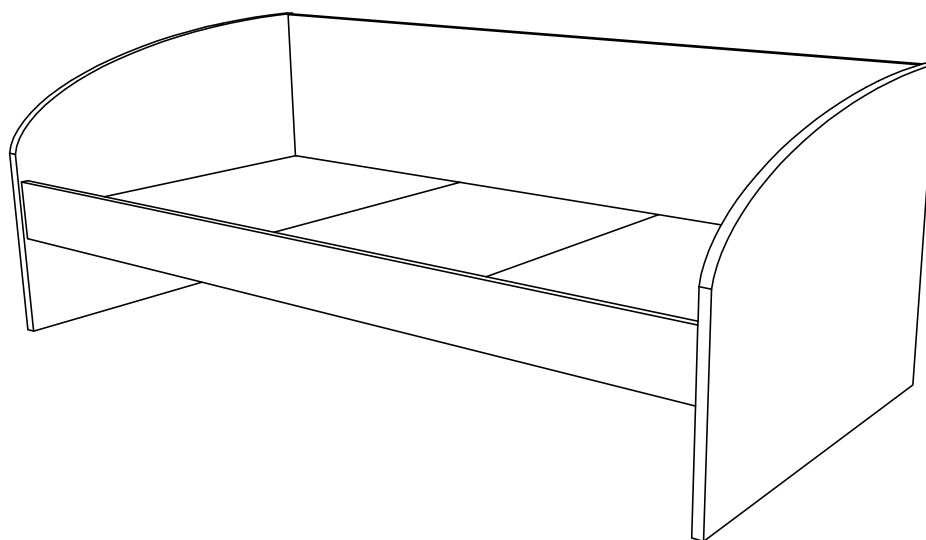

piece No. komad br.	dimension I dimenzija I	dimension II dimenzija II	quantity komada
1	2000	150	1
2	2000	520	1
3	970	750	2
4	850	50	4
5	914	662	3

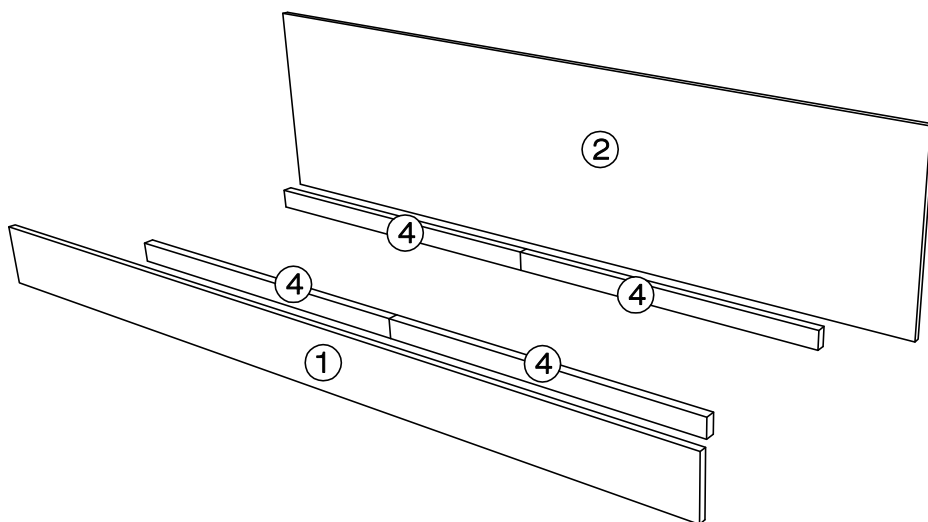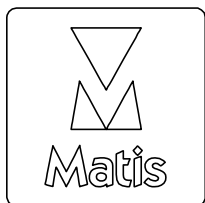

PAŽNJA!!!

Obavezno je spajanje podnice i nosača podnice vijcima 4x40mm.

